

Setting Corvette L98 Ignition Timing

- Chock wheels.
 - Disconnect EST. (*brown wire/black tracing into black connector – see photo*)
 - Start engine, put in *Neutral* for manual transmission; *Drive* for automatic.
 - Set timing to 6 degrees BTDC. (*large notch is 0°; each additional notch is 2° increment – see photo*)
 - Lock down distributor....re- check timing again to be sure you didn't move distributor when locking it down.
 - Shut off engine.
 - Plug in EST.
 - Disconnect battery to remove code...wait 10-30 seconds....re-connect battery.
 - Good to go.
-



Setting Corvette L98 Ignition Timing

